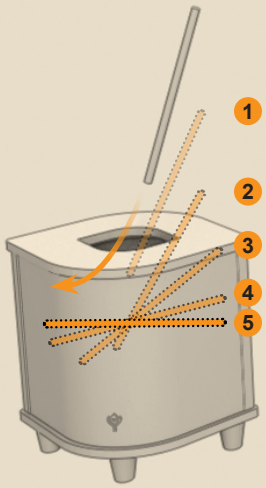

Carrying rod

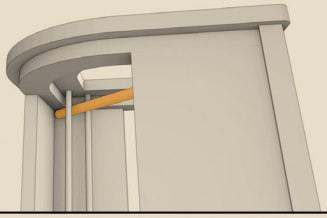

YONITY

www.yonity.si

Air flap

The flap can be opened or closed during the use. Opened flap enhances air circulation, while the closed flap reduces air circulation, which causes higher steam density and more intensive process.

After the use, open the air flap at the bottom of the housing.
It should remain open until the next use. This will enable better air circulation and exhaust of the excess moisture from the inside of the housing.

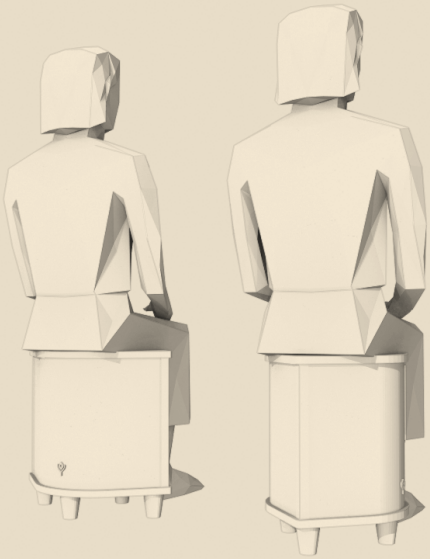

Lengthwise or crosswise position.

Maintenance

Wood
The surfaces of the wood may become a little rougher over the time, which is quite common. The surface can be sanded with fine sandpaper and subsequently protected with natural oils or natural wood waxes.

Cushion
Hand wash recommended.

The buckwheat hulls can be replaced with the help of a fastener on the side.

YONITY